

SEE HOW IT WORKS

WATCH THE VIDEO TUTORIAL AT
[BLATEPAPES.COM/HOW-TO-USE/CAPSULE-MACHINE](https://blatepapes.com/how-to-use/capsule-machine)




INSTRUCTIONS

BEFORE FIRST USE


Thoroughly clean all the machine parts with water and mild dish soap. Dry the machine with a towel, making sure it is completely dry before use.

Use the provided Phillips screwdriver to attach the **handle** to the **Tamper**. Screws are found preattached to the handle.

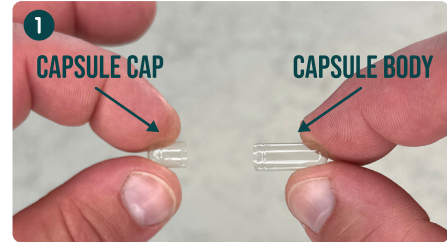

Open up 100 capsules and separate the bodies and caps into different bowls

The large piece is the body and the small piece is the cap

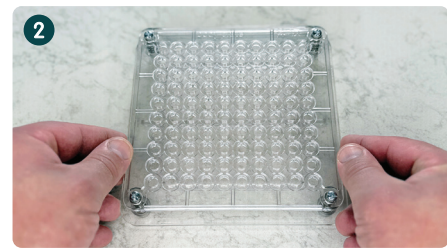


Place the **BODY PLATE** on a flat surface



Place the **FRAME PLATE** on top of it



Pour 100 pieces of the **CAPSULE BODY** parts onto the **FRAME PLATE**

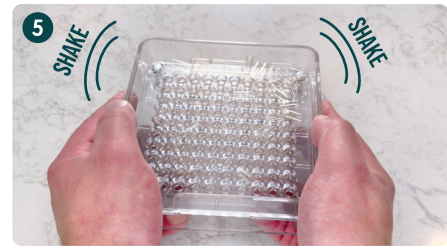

Shake the **BODY PLATE** gently

So that all of the **CAPSULE BODY** parts fall into the holes with openings facing up. If any of the capsule bodies have fallen the wrong way around, flip them over using our **QUICK FLIP TIP**



Lift up and remove the **FRAME PLATE** and place the **SPILL GUARD**



Pour your powder on top and use the **POWDER SPREADER** to spread the powder evenly



Use the **TAMPER** tool to tamp down your powder



ALSO TRY...



THE BEST WAY TO TAKE YOUR POWDERS

QUICK FLIP TIP

Remove an upside-down capsule piece by using another capsule piece of the same kind to press down and pull out the upside-down piece



FIND ALL OF OUR PRODUCTS AT

WWW.BLATEPAPES.COM


PULLULAN



GELATIN




EMPTY CAPSULES

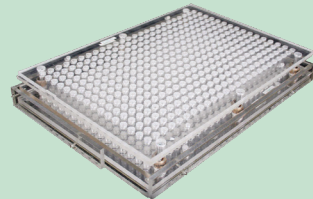

ACRYLIC PRO SERIES



Add a bit more powder and spread it into the capsules
Repeat Steps 8-9 until firmly packed

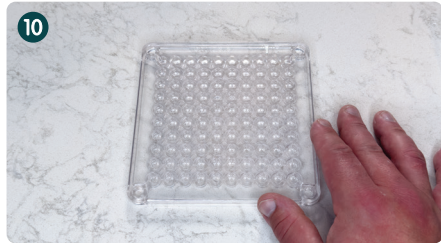


Move the **BODY PLATE** aside and take out the **CAPPING PLATE**




Place the **FRAME PLATE** on top and pour in 100 pieces of the **CAPSULE CAPS**




Shake the **CAPPING PLATE** gently so that all of the **CAPSULE CAP** parts fall into the holes with openings facing up. If any of the capsule caps have fallen the wrong way around, flip them over using our **QUICK FLIP TIP**

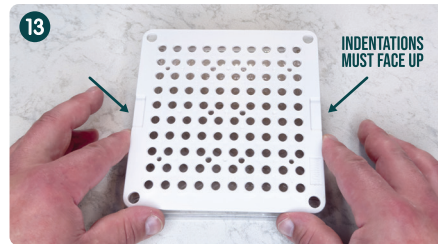


Remove the **FRAME PLATE** and place the **MIDDLE PLATE** on top of the **CAPPING PLATE**

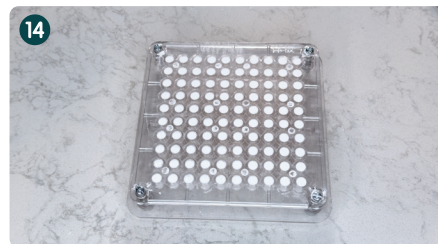

Take out the **BODY PLATE**

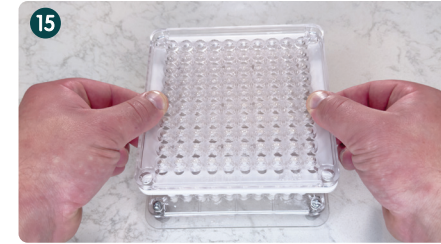

While holding them together, flip the **CAPPING + MIDDLE PLATE** onto the **BODY PLATE**

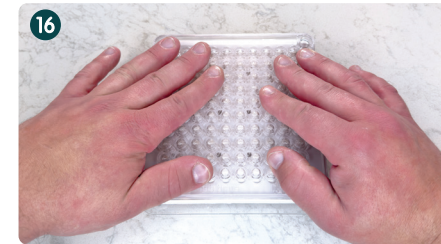

Press down firmly a couple of times.

Remember to press evenly all around the capsule machine. You should hear multiple snapping sounds as the capsules close.



Lift up the **CAPPING PLATE** and your capsules are ready!

BlateCo

INSTRUCTION MANUAL



FOLLOW US @BLATEPAPES